

9-in-1 Spy Watch

This multifunctional wristwatch is an essential tool for any good spy. You can protect valuables with the help of the built-in motion detector, deliver important messages in the secret capsules, and find out what time it is around the world with the push of a button. All these functions and more will turn all of your rival agents green with envy!

WARNING:

This product contains a button cell or coin cell battery. A swallowed button cell or coin cell battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

WARNING! Not suitable for children under 3 years. Choking hazard – small parts may be swallowed or inhaled. Keep the packaging and instructions as they contain important information.

The 9 Functions:

1. Clock with date display
2. Alarm clock
3. Stopwatch
4. Global time zone display
5. Red decoding window and pad for secret messages
6. Magnifying function of the decoding window
7. Flashlight
8. Secret capsule for messages
9. Security alarm with motion sensor

Image 1

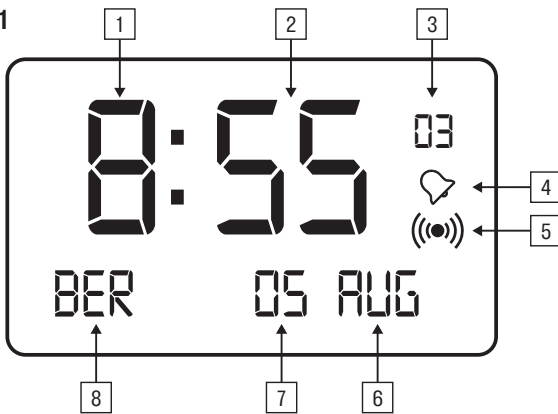

Have an adult insert the batteries (see reverse side, image 3).

How to set up the time zones and 24-hour display:

Choose between the 12-hour and 24-hour modes. You can switch between the two using button B. In 12-hour-mode, AM or PM will be displayed in the bottom left of your screen (8). In 24-hour-mode, the time zone will be displayed in this area. Set the watch to a city in the time zone that you are in (e.g.: "NYC" for the eastern United States). See the box to the right for a list of cities.


How to set the time and date:

Hold button B for 2 seconds, to activate the setup mode. The hour display (1) will begin blinking. When you press button C, the flashing number will go up; when you press button D, the number will go down. In setup mode you can switch between the individual settings with button B. Press button B to move from the hour display to the minutes display (2) and use buttons C and D to set the correct time. Press B again to access the seconds display (3). Press B again to access the date (7). Press B again to access the month (6). Press B again to access the year. While setting the year, it will be displayed in the middle of the screen, in place of the hour and minutes (1, 2). Wait 5 seconds or press button A to exit setup mode.

How to use the alarm clock:

1. Hold button C for 2 seconds to set an alarm time.
2. Set the hour and minutes the same way that you set the time above. When you have set the alarm time, press button A to return to clock mode. The bell symbol (4) indicates that the alarm clock is set.
3. The alarm will ring at the set time. Press button C to stop the alarm. Press buttons C and D at the same time to deactivate the alarm clock.

Image 2

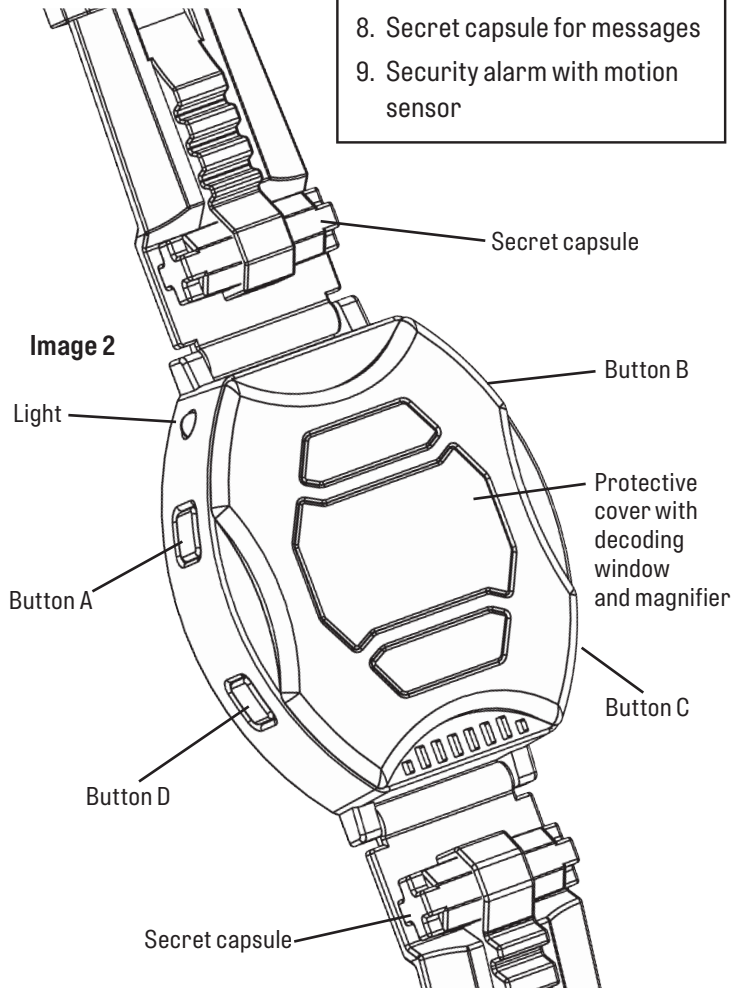

All the time in the world:

Press button C or D, to switch from one city to the next:

City	CODE	City	CODE
Tokyo, Japan	TYO	Berlin, Germany	BER
Seoul, South Korea	SEL	Paris, France	PAR
Beijing, China	PEK	London, England	LON
Hong Kong, China	HKG	Rio de Janeiro, Brazil	RIO
Singapore	SIN	Toronto, Canada	YYZ
Bangkok, Thailand	BKK	New York City, New York (USA)	NYC
Delhi, India	DEL	Chicago, Illinois (USA)	CHI
Riad, Saudi Arabia	RUH	Denver, Colorado (USA)	DEN
Moscow, Russia	MOW	Los Angeles, California (USA)	LAX
Cairo, Egypt	CAI	Anchorage, Alaska (USA)	ANC
Helsinki, Finland	HEL	Honolulu, Hawaii (USA)	HNL
Rome, Italy	ROM	Sydney, Australia	SYD

How to use the stopwatch:

1. Press buttons B and D at the same time. The display will show "00:00 00" (the bottom left will display "STA").
2. Use button D to start the stopwatch (the bottom left will display "STP"). Press button D again to stop the stopwatch. Minutes, seconds, and milliseconds will be counted.
3. Press button D again to start the stopwatch again.
4. Press button C to reset the time to zero.
5. Press buttons B and D together to switch back to clock mode.

Image 3


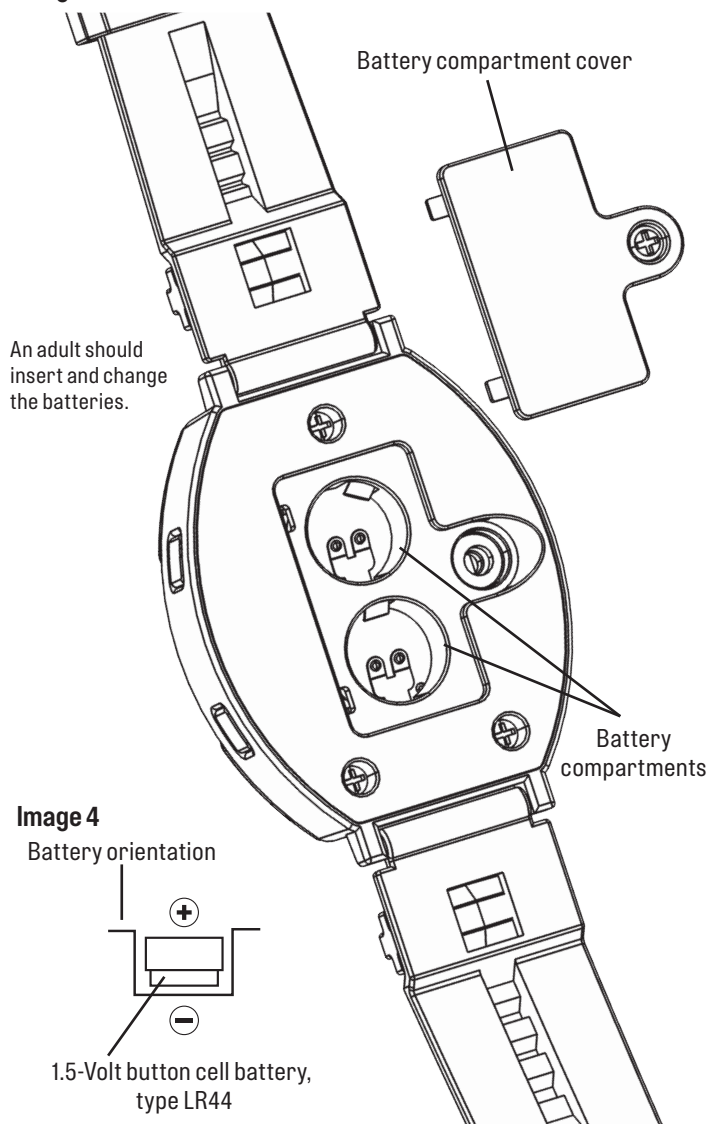


Image 4

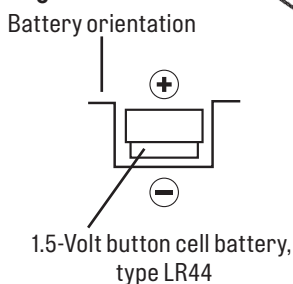

How to activate the motion sensor mode:

1. To access the motion sensor mode, press and hold button D for 2 seconds.
2. The motion sensor symbol “(☉)” (5) will appear. It will take another 5 seconds for the sensor to actually activate. That will give you time to place the watch.
3. Attach the activated watch to a door handle, your backpack, or another object that no one but you should be touching.
4. If the watch is moved, the motion sensor will go off, and the watch will begin to vibrate, beep, and blink. Press button D to turn off the alarm. The sensor will remain activated, and you can use the watch to secure an important item again. If you don't press button D, the alarm will turn off automatically after 8 seconds.
6. To deactivate the motion sensor, press and hold button D for 2 seconds.

Secret capsule for important messages:

Slide the black capsule out of its holder and pull it apart. If you tightly roll up a small piece of paper, you can securely store important messages here.

How to encode secret messages:

Open the protective cover of your watch by rotating it up and to the right. With the help of the decoding window, you can decode secret messages that are written in pencil on the included secret paper. By holding the paper behind the decoding window, you can easily decipher messages that were previously unreadable. Press lightly with the pencil, so that the writing can't be read on the patterned paper. You can also use the protective cover as a magnifying glass at the same time.

How to use the flashlight:

Press button A to turn on the flashlight. The light will shine as long as you hold the button. Be careful not to shine the light into your eyes or the eyes of any other people or animals.

How to insert and replace the batteries:

1. An adult should insert and change the batteries.
2. Use a Phillips-head screwdriver to loosen the screw on the battery compartment and lift off the battery compartment cover. The screw will remain in the cover (see image 3).
3. Remove the old batteries (if applicable) and insert two new batteries (type LR44) with the positive side up (see image 4).
4. Close the battery compartment and screw the cover back on. Be careful not to overtighten the screw.

Safety and disposal instructions for the device and batteries:

- An adult should insert and change the batteries.
- To operate the device, you will need two 1.5-volt button cell batteries (type LR44), which are included. Remove the plastic strip to activate the batteries.
- Avoid a short circuit of the batteries. A short circuit can cause the wires to overheat and the batteries to explode.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not mix old and new batteries.

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Batteries are to be inserted with the correct polarity (+ and -). Press them gently into the battery compartment (see images 3 and 4). Always close the battery compartment with the cover after changing the batteries.
- Non-rechargeable batteries are not to be recharged. They could explode!
- Rechargeable batteries are only to be charged under adult supervision.

- Rechargeable batteries are to be removed from the toy before being charged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of used batteries in accordance with environmental provisions, not in the household trash.
- Avoid deforming the batteries.
- Do not leave the toy in direct sunlight or expose it to other sources of heat.
- **IMPORTANT!** Protect the device from moisture. Clean it with a damp cloth and allow it to dry thoroughly before using it again.

NOTES ON DISPOSAL OF ELECTRICAL AND ELECTRONIC COMPONENTS

The electronic components of this product are recyclable. For the sake of the environment, do not throw them into the household trash at the end of their lifespan. They must be delivered to a collection location for electronic waste, as indicated by the following symbol:

Please contact your local authorities for the appropriate disposal location.

